


3.UTB01/UTG01鬆線機構及更換零件

Thread Tension Components And Motor Components For UTB01/UTG01

序號 Ref. No.	物料編號 Parts Number	名稱 Description	單位用量 Amt.Req.
1	4UTB020308	止動桿 Stopper -----	1
2	8MN06400600A	螺絲 Screw (CT0244 M6-1*6) -----	2
3	4UTB020303	針定位器 Synchronizer -----	1
4	4UTB02A0304	針定位器組 Mount- on Type Synchronizer -----	1
5	4UTB02A0305	止動桿組 Stopper Set Asm. -----	1
6	4UTB020306	束線 Plastic Binding Wire -----	2
7	4UTB020307	六角板手 Allen Key -----	1
8	8MC04281007A	螺絲 Screw (CT0113 M4-0.7*10) -----	1
*9	4UTB010409	防塵蓋 Dust Cover -----	1
10	4UTB000410	曲柄 Tension Release Shaft -----	1
11	4UTB000411	彈簧 Spring -----	1
12	4UTB000412	接頭 Pin -----	1
13	8MN03200300A	螺絲 Screw (CT0115 M3-0.5*3) -----	(see the table)
14	4UTB000414	彈簧 Spring -----	1
15	2200001025	墊圈 Washer -----	1
16	90ER030	E形扣環 E Ring -----	1
17	8MB04280507K	螺絲 Screw (FT0235 M4-0.7*5) -----	2
18	4UTB000418	導線 Thread Guide Eyelet -----	1
19	4UTB000419	鬆線滑板 Release Wedge -----	1
20	4UTB000420	導線座 Tension Post Support -----	1
21	8MM04281607A	螺絲 Screw (FT0202 M4-0.7*16) -----	2
22	4UTB000422	隔環 Spacer -----	2
23	4UTB000423	導桿 Guide Bar -----	1
24	4UTB000424	鬆線桿 Release Bar -----	(see the table)
25	4UTB000425	鬆線座 Thread Pull-off Block -----	(see the table)
26	8MC03201006D	螺絲 Screw (UTB0426 M3-0.5*10) -----	2
27	4UTB000427	換向閥用控制線 Terminal Holder -----	1
28	4UTB000428	端子座固定架 Terminal Holder Support -----	1
29	8MB04280608A	螺絲 Screw (UTB0130 M4-0.7*6) -----	2
30	4UTB010430	空氣管 Air Tube -----	1
31	4UTB0004321	調壓濾水閥 Regulator -----	1
32	4UTB010433	防塵蓋 Dust Cover -----	1
**33	4UTB000434	鬆線座 Thread Pull-off Block -----	(see the table)
34	4UTB000435	導線 Thread Guide Eyelet -----	1
35	8MB03200306X	螺絲 Screw (UTB0436 M3-0.5*3) -----	1
36	4UTG010462	控制線接頭 Connector-----	1
37	8WD30000015B	木螺絲 Wood Screw -----	2
38	66635	六角板手 Allen Key 2MM -----	1
39	66640	六角板手 Allen Key 2.5MM -----	1
40	66668	平口起子 Screwdriver -----	1
41	4UTB000443	手輪 Handwheel -----	1
42	4UTB000444	磁鐵 Magnet -----	2
43	8MN06400800A	螺絲 Screw (CT0549 M6-1*8) -----	1
44	8MN06401100C	螺絲 Screw (CT0548 M6-1*11) -----	1
45	4UTB000447	內藏式定位器 Built-in Type Synchronizer -----	1
46	8MB04280608A	螺絲 Screw (UTB0130 M4-0.7*6) -----	2
***47	4UTB02A0347	外置式定位器組 Mount- on Type Synchronizer Set-----	1
***48	/Bs001	內藏式定位組 Built-in Type Synchronizer -----	1
49	4UTB000451	結線鉤座 Looper Holder -----	1
50	4UTB00A0452	鬆線組 Thread Tension Mechanism -----	1

3.UTB01/UTG01鬆線機構及更換零件

Thread Tension Components And Motor Components For UTB01/UTG01

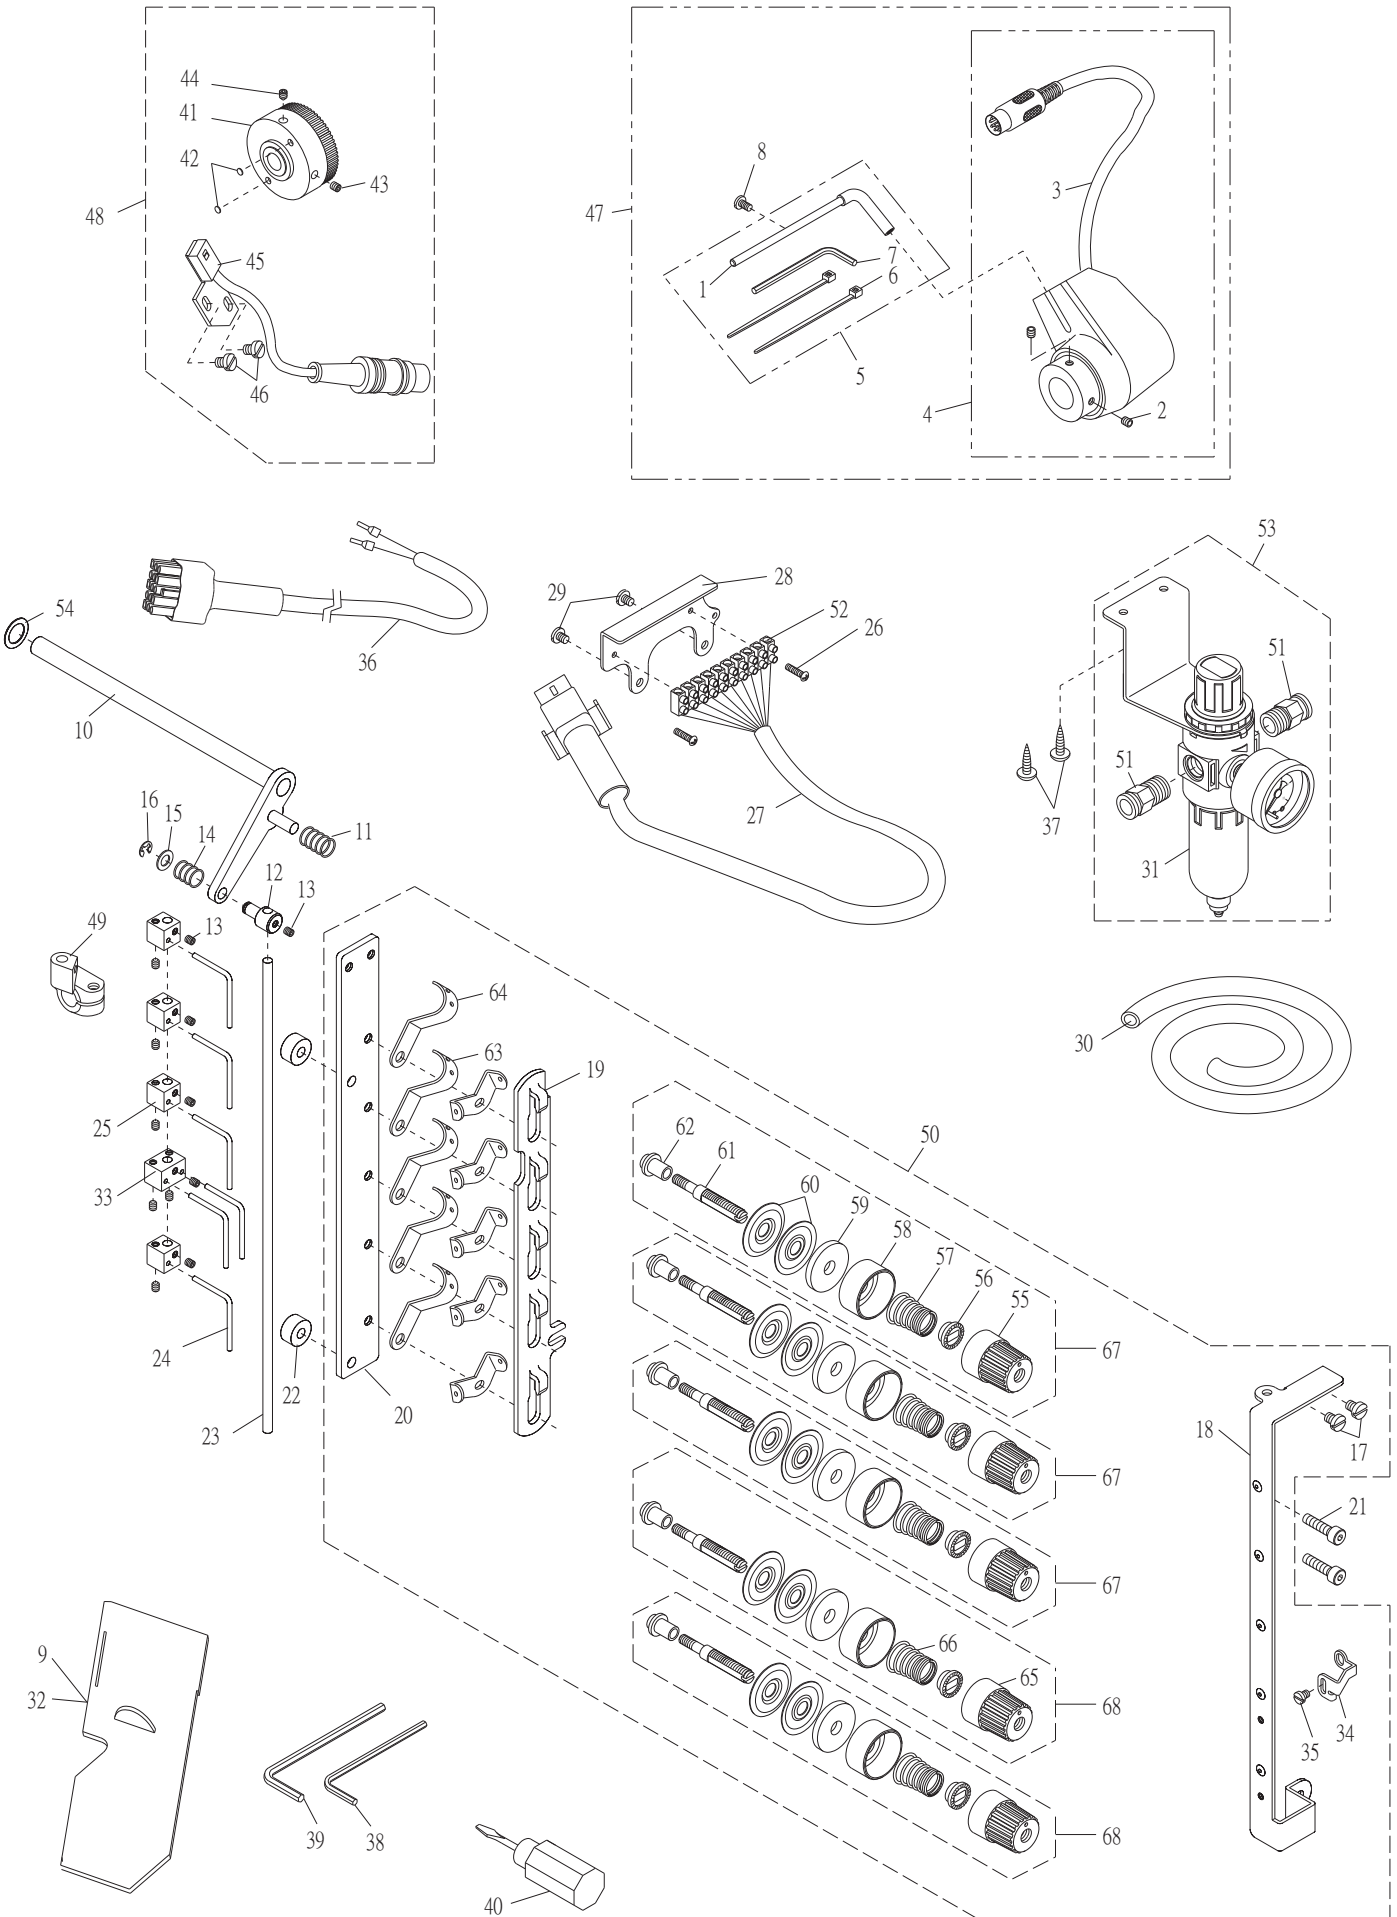

3.UTB01/UTG01鬆線機構及更換零件

Thread Tension Components And Motor Components For UTB01/UTG01

序號 Ref. No.	物料編號 Parts Number	名稱 Description	單位用量 Amt. Req.
51	4UTB010456	8mm空氣管接頭 Connector -----	2
52	4UTB000457	控制線接頭 Connector-----	1
53	4UTB00A04582	調壓濾水閥組 Regulator Asm.-----	1
54	4UTB010459	墊片 Clamp Spring Pressure Holder -----	1
55	2100001121	張力調整螺帽 Tension Nut (Red) (SH1121) (see the table) -----	3
56	2200000303	套管 Bushing (see the table) -----	5
57	2100001123	彈簧 Spring (Red) (SH1123) (see the table) -----	3
58	2200000305	彈簧座 Spring Seat (see the table) -----	5
59	2100001127	羊毛氈 Felt (see the table) -----	5
60	2100001126	張力控制盤 Tension Disc (see the table) -----	10
61	22000003081	螺樁 Stud (see the table) -----	5
62	22000003091	隔環 Spacer (see the table) -----	5
63	2200000311	導線 Thread Guide (see the table) -----	5
64	2200000312	導線 Thread Guide (see the table) -----	5
65	2100001121A	張力調整螺帽 Tension Nut (Yellow) (SH1121) (see the table) -----	2
66	2100041131	彈簧 Spring (Yellow) (SH1131) (see the table) -----	2
67	231A0001922	張力控制組 Tension Asm. (Red) (see the table) -----	3
68	220A0000315	張力控制組 Tension Asm. (Yellow) (see the table) -----	2

Ref. No.	13	24	25	34
2 Needle without Spreader	7pcs.	3pcs.	3pcs.	
3 Needle without Spreader	9pcs.	4pcs.	4pcs.	
2 Needle with Spreader	10pcs.	5pcs.	3pcs.	1pcs.
3 Needle with Spreader	12pcs.	6pcs.	4pcs.	1pcs.

*: 40M,48M,56M用 For 40M,48M,56M

**： 64M用 For 64M

***： 選購,並須配合伺服馬達使用 <型號HVP-60,HVP-70,HVP-90>

***： To choose and purchase: These two devices should be used together with AC servo motor
<Model No:HVP-60,HVP-70,HVP-90>