



6. UTC04 / UTC06 鬆線機構及更換零件

Thread Tension Components And Motor Components

序號	物料編號	名稱	單位用量
Ref. No.	Parts Number	Description	Amt. Req.
**1	4UTB000428	端子座固定架 Terminal Holder Support -----	1
2	8MN06400600A	螺絲 Screw (CT0244 M6-1*6) -----	2
3	4UTB020303	針定位器 Synchronizer -----	1
4	4UTB02A0304	針定位器組 Mount- on Type Synchronizer -----	1
5	4UTB02A0305	止動桿組 Stopper Set Asm. -----	1
6	4UTB020306	束線 Plastic Binding Wire -----	2
7	4UTB020307	六角扳手 Allen Key -----	1
8	4UTB020308	止動桿 Stopper -----	1
9	8MC04281007A	螺絲 Screw (CT0113 M4-0.7*10) -----	1
10	4UTB000410	曲柄 Tension Release Shaft -----	1
11	4UTB000411	彈簧 Spring -----	1
12	4UTB000412	接頭 Pin -----	1
13	8MN03200300A	螺絲 Screw (CT0115 M3-0.5*3) -----	(see the table)
14	4UTB000414	彈簧 Spring -----	1
15	2200001025	墊圈 Washer -----	1
16	90ER030	E形扣環 E Ring -----	1
17	8MB04280507K	螺絲 Screw (FT0235 M4-0.7*5) -----	2
18	4UTB000418	導線 Thread Guide Eyelet -----	1
19	4UTB000419	鬆線滑板 Release Wedge -----	1
20	4UTB000420	導線座 Tension Post Support -----	1
21	8MM04281607A	螺絲 Screw (FT0202 M4-0.7*16) -----	2
22	4UTB000422	隔環 Spacer -----	2
23	4UTB000423	導桿 Guide Bar -----	1
24	4UTB000424	鬆線桿 Release Bar -----	(see the table)
25	4UTB000425	鬆線座 Thread Pull-off Block -----	(see the table)
26	8MC03201006D	螺絲 Screw (UTB0426 M3-0.5*10) -----	2
27	4UTB000427	換向閥用控制線 Terminal Holder -----	1
28	8MB03200306X	螺絲 Screw (UTB0436 M3-0.5*3) -----	2
29	8MB04280608A	螺絲 Screw (UTB0130 M4-0.7*6) -----	2
30	4UTB000457	控制線接頭 Connector-----	1
31	4UTB02A0349	鬆線組 Theard Tension Mechanism -----	1
***32	4UTB060301	端子座固定架 Terminal Holder Support -----	1
*33	BS003	內藏式定位器組 Built-in Type Synchronize Asm. -----	1
34	4UTB000434	鬆線座 Thread Pull-off Block -----	(see the table)
35	4UTB000435	導線 Thread Guide Eyelet -----	2
36	4UTB020351	定位器支架 Synchronizer Bracket -----	1
37	90ER030	E形扣環 E Ring -----	2
38	66635	六角扳手 Allen Key 2MM -----	1
39	66640	六角扳手 Allen Key 2.5MM -----	1
40	66668	平口起子 Screwdriver -----	1
41	2200000829	連結銷 Connecting Pin -----	2
42	4BS0030102	磁鐵 Magnet -----	2
43	2200000830	連桿 Link -----	1
44	8MC06401008E	螺絲 Screw (CT0832 M6-1*10) -----	1
45	4UTB02A0345	內藏式定位器組 Built-in Type Synchronize Asm. -----	1
46	8MB04280608A	螺絲 Screw (UTB0130 M4-0.7*6) -----	2
*47	4UTB02A0347	外置式定位器組 Mount- on Type Synchronizer Set-----	1
**48	4UTB000451	結線鉤座 Looper Holder -----	1
49	4UTB010459	墊片 Clamp Spring Pressure Holder -----	1
50	4UTC010250	連桿 Lever -----	1



6. UTC04 / UTC06 鬆線機構及更換零件

Thread Tension Components And Motor Components

序號 Ref. No.	物料編號 Parts Number	名稱 Description	單位用量 Amt. Req.
51	4UTC01A0251	連桿組 Link Asm. -----	1
52	2200000826	連桿 Lever -----	1
53	8MM05321409A	螺絲 Screw (CT0632 M5-0.8*14) -----	1
54	4BS0030104	內藏式定位器組 Built-in Type Synchronize Asm. -----	1
55	2100001121	張力調整螺帽 Tension Nut ( Red ) ( SH1121) -----	3
56	2100001123	彈簧 Spring ( Red ) ( SH1123) -----	3
57	2200000303	套管 Bushing -----	5
58	2200000305	彈簧座 Spring Seat -----	5
59	2100001127	羊毛氈 Felt -----	5
60	2100001126	張力控制盤 Tension Disc -----	10
61	22000003081	螺樁 Stud -----	5
62	22000003091	隔環 Spacer -----	5
63	2200000311	導線 Thread Guide -----	5
64	2200000312	導線 Thread Guide -----	5
65	2100001121A	張力調整螺帽 Tension Nut ( Yellow ) ( SH1121) -----	2
66	2100041131	彈簧 Spring ( Yellow ) ( SH1131) -----	2
67	231A0001922	張力控制組 Tension Asm. ( Red ) -----	4
68	220A0000315	張力控制組 Tension Asm. ( Yellow ) -----	2

\*: 選購,並須配合伺服馬達使用 <型號HVP-60,HVP-70,HVP-90>

\*: To choose and purchase: These two devices should be used together with AC servo motor  
<Model No:HVP-60,HVP-70,HVP-90>

\*\* : UTC04 專用

機型 Model UTC04

針數 \ 序號	1	13	18	19	20	23	24	25	34	31
2 Needle without Spreader	1	8pcs.	1	1	1	1	4pcs.	2pcs.	1pcs.	1
3 Needle without Spreader		10pcs.					5pcs.	3pcs.	1pcs.	
2 Needle with Spreader		11pcs.					6pcs.	2pcs.	2pcs.	
3 Needle with Spreader		13pcs.					7pcs.	3pcs.	2pcs.	

機型 Model UTC06

針數 \ 序號	32	13	18	19	20	23	24	25	34	31
2 Needle without Spreader	1	8pcs.	1	1	1	1	4pcs.	2pcs.	1pcs.	1
3 Needle without Spreader		10pcs.					5pcs.	3pcs.	1pcs.	
2 Needle with Spreader		11pcs.					6pcs.	2pcs.	2pcs.	
3 Needle with Spreader		13pcs.					7pcs.	3pcs.	2pcs.	