



7. UTE02 鬆線機構及更換件 UTE02 Thread Tension Components And Motor Components

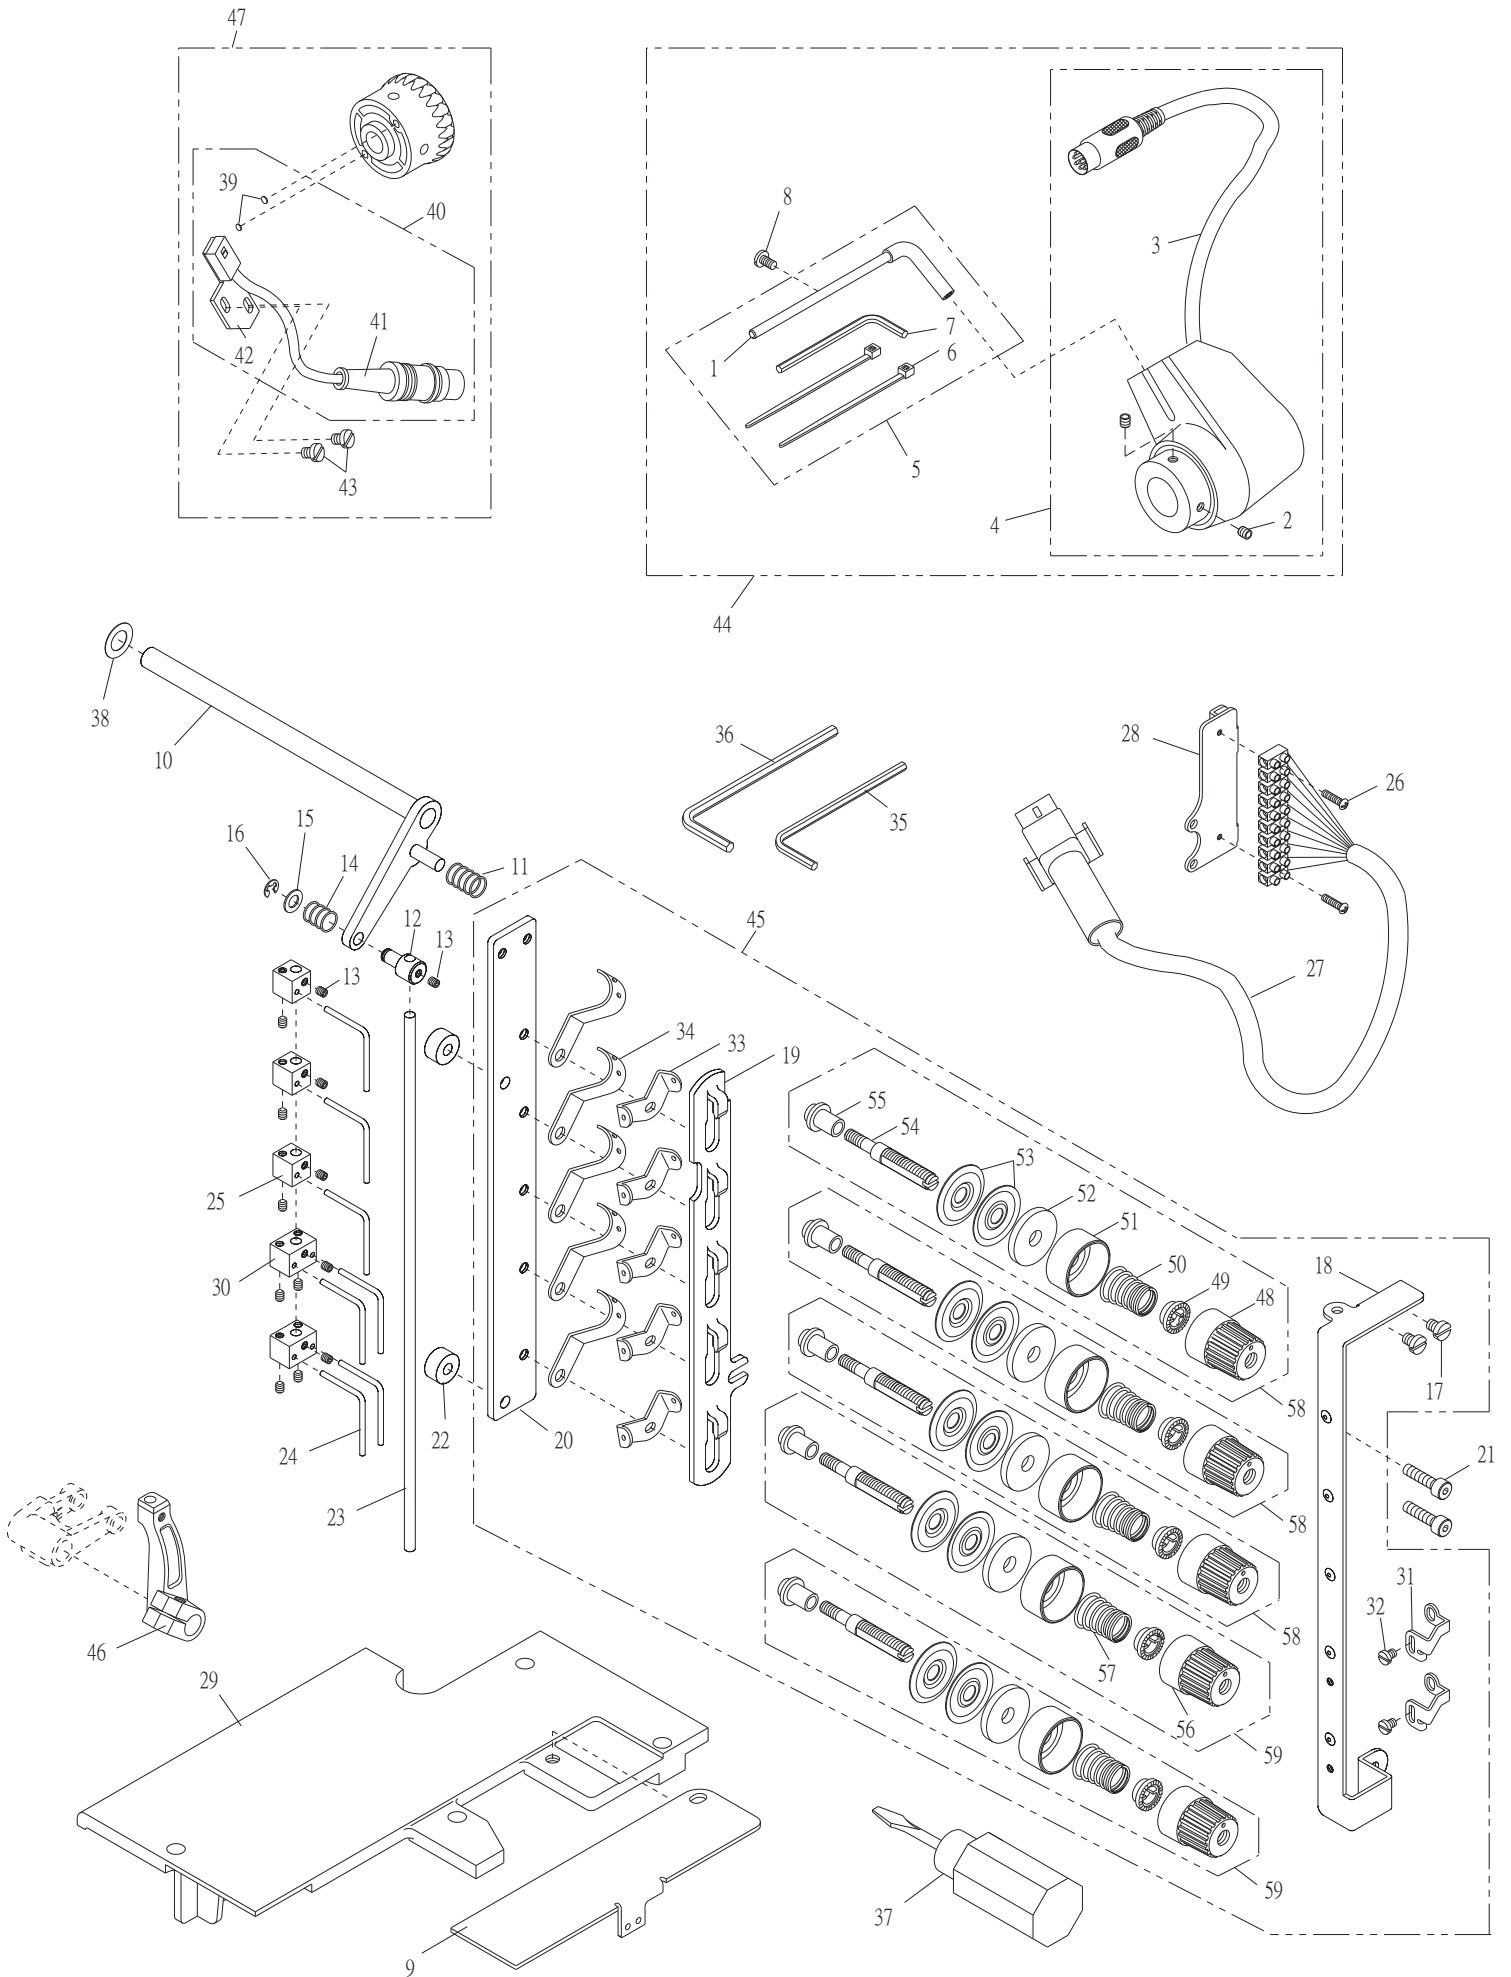

7.UTE02 鬆線機構及更換件 UTE02 Thread Tension Components And Motor Components

序號	物料編號	名稱	單位用量
Ref. No.	Parts Number	Description	Amt.Req.
1	4UTB020308	止動桿 Stopper -----	1
2	8MN06400600A	螺絲 Screw (CT0244 M6-1*6) -----	2
3	4UTB020303	針定位器 Synchronizer -----	1
4	4UTB02A0304	針定位器組 Mount- on Type Synchronizer -----	1
5	4UTB02A0305	止動桿組 Stopper Set Asm. -----	1
6	4UTB020306	束線 Plastic Binding Wire -----	2
7	4UTB020307	六角板手 Allen Key -----	1
8	8MC04281007A	螺絲 Screw (CT0113 M4-0.7*10) -----	1
9	4UTD0003091	防塵蓋 Dust Cover -----	1
10	4UTB000410	曲柄 Tension Release Shaft -----	1
11	4UTB000411	彈簧 Spring -----	1
12	4UTB000412	接頭 Pin -----	1
13	8MN03200300A	螺絲 Screw (CT0115 M3-0.5*3) -----	(see the table)
14	4UTB000414	彈簧 Spring -----	1
15	2200001025	墊圈 Washer -----	1
16	90ER030	E形扣環 E Ring -----	1
17	8MB04280507K	螺絲 Screw (FT0235 M4-0.7*16) -----	2
18	4UTB000418	導線 Thread Guide Eyelet -----	1
19	4UTB000419	鬆線滑板 Release Wedge -----	1
20	4UTB000420	導線座 Tension Post Support -----	1
21	8MM04281607A	螺絲 Screw (FT0202 M4-0.7*16) -----	2
22	4UTB000422	隔環 Spacer -----	2
23	4UTB000423	導桿 Guide Bar -----	1
24	4UTB000424	鬆線桿 Release Bar-----	(see the table)
25	4UTB000425	鬆線座 Thread Pull-off Block -----	(see the table)
26	8MC03201006D	螺絲 Screw (UTB0426 M3-0.5*10) -----	2
27	4UTB000427	換向閥用控制線 Terminal Holder -----	1
28	4UTD000328	端子座固定架 Terminal Holder Support -----	1
29	4UTD0003291	封蓋 Rear Cover -----	1
30	4UTB000434	鬆線座 Thread Pull-off Block -----	(see the table)
31	4UTB000435	導線 Thread Guide Eyelet -----	2
32	8MB03200306X	螺絲 Screw (UTB0436 M3-0.5*3) -----	2
33	2200000311	導線 Thread Guide -----	5
34	2200000312	導線 Thread Guide -----	10
35	66635	六角板手 Allen Key 2MM -----	1
36	66640	六角板手 Allen Key 2.5MM -----	1
37	66668	平口起子 Screwdriver -----	1
38	4UTB010459	墊圈 Washer -----	1
39	4BS0030102	磁鐵 Magnet-----	2
40	4UTB02A0345	螺絲 Screw (CT0549 M6-1*8) -----	1
41	4BS0030104	螺絲 Screw (CT0548 M6-1*11) -----	1
42	4UTB020351	內藏式定位器 Build-in Type Synchronizer -----	1
43	8MB04280608A	螺絲 Screw (UTB0130 M4-0.7*6) -----	2
*44	4UTB02A0347	外置式定位器組 Mount- on Type Synchronizer Set-----	1
45	4UTB02A0349	鬆線組 Thread Tension Mechanism -----	1
46	4UTD000351	擺動臂 Rocker Arm -----	1
*47	Bs003	內藏式定位組 Build-in Type Synchronizer -----	1
48	2100001121	張力調整螺帽 Tension Nut (Red) (SH1121)-----	3
49	2200000303	套管 Bushing -----	5
50	2100001123	彈簧 Spring (Red) (SH1123)-----	3

7. UTE02 鬆線機構及更換件 UTE02 Thread Tension Components And Motor Components

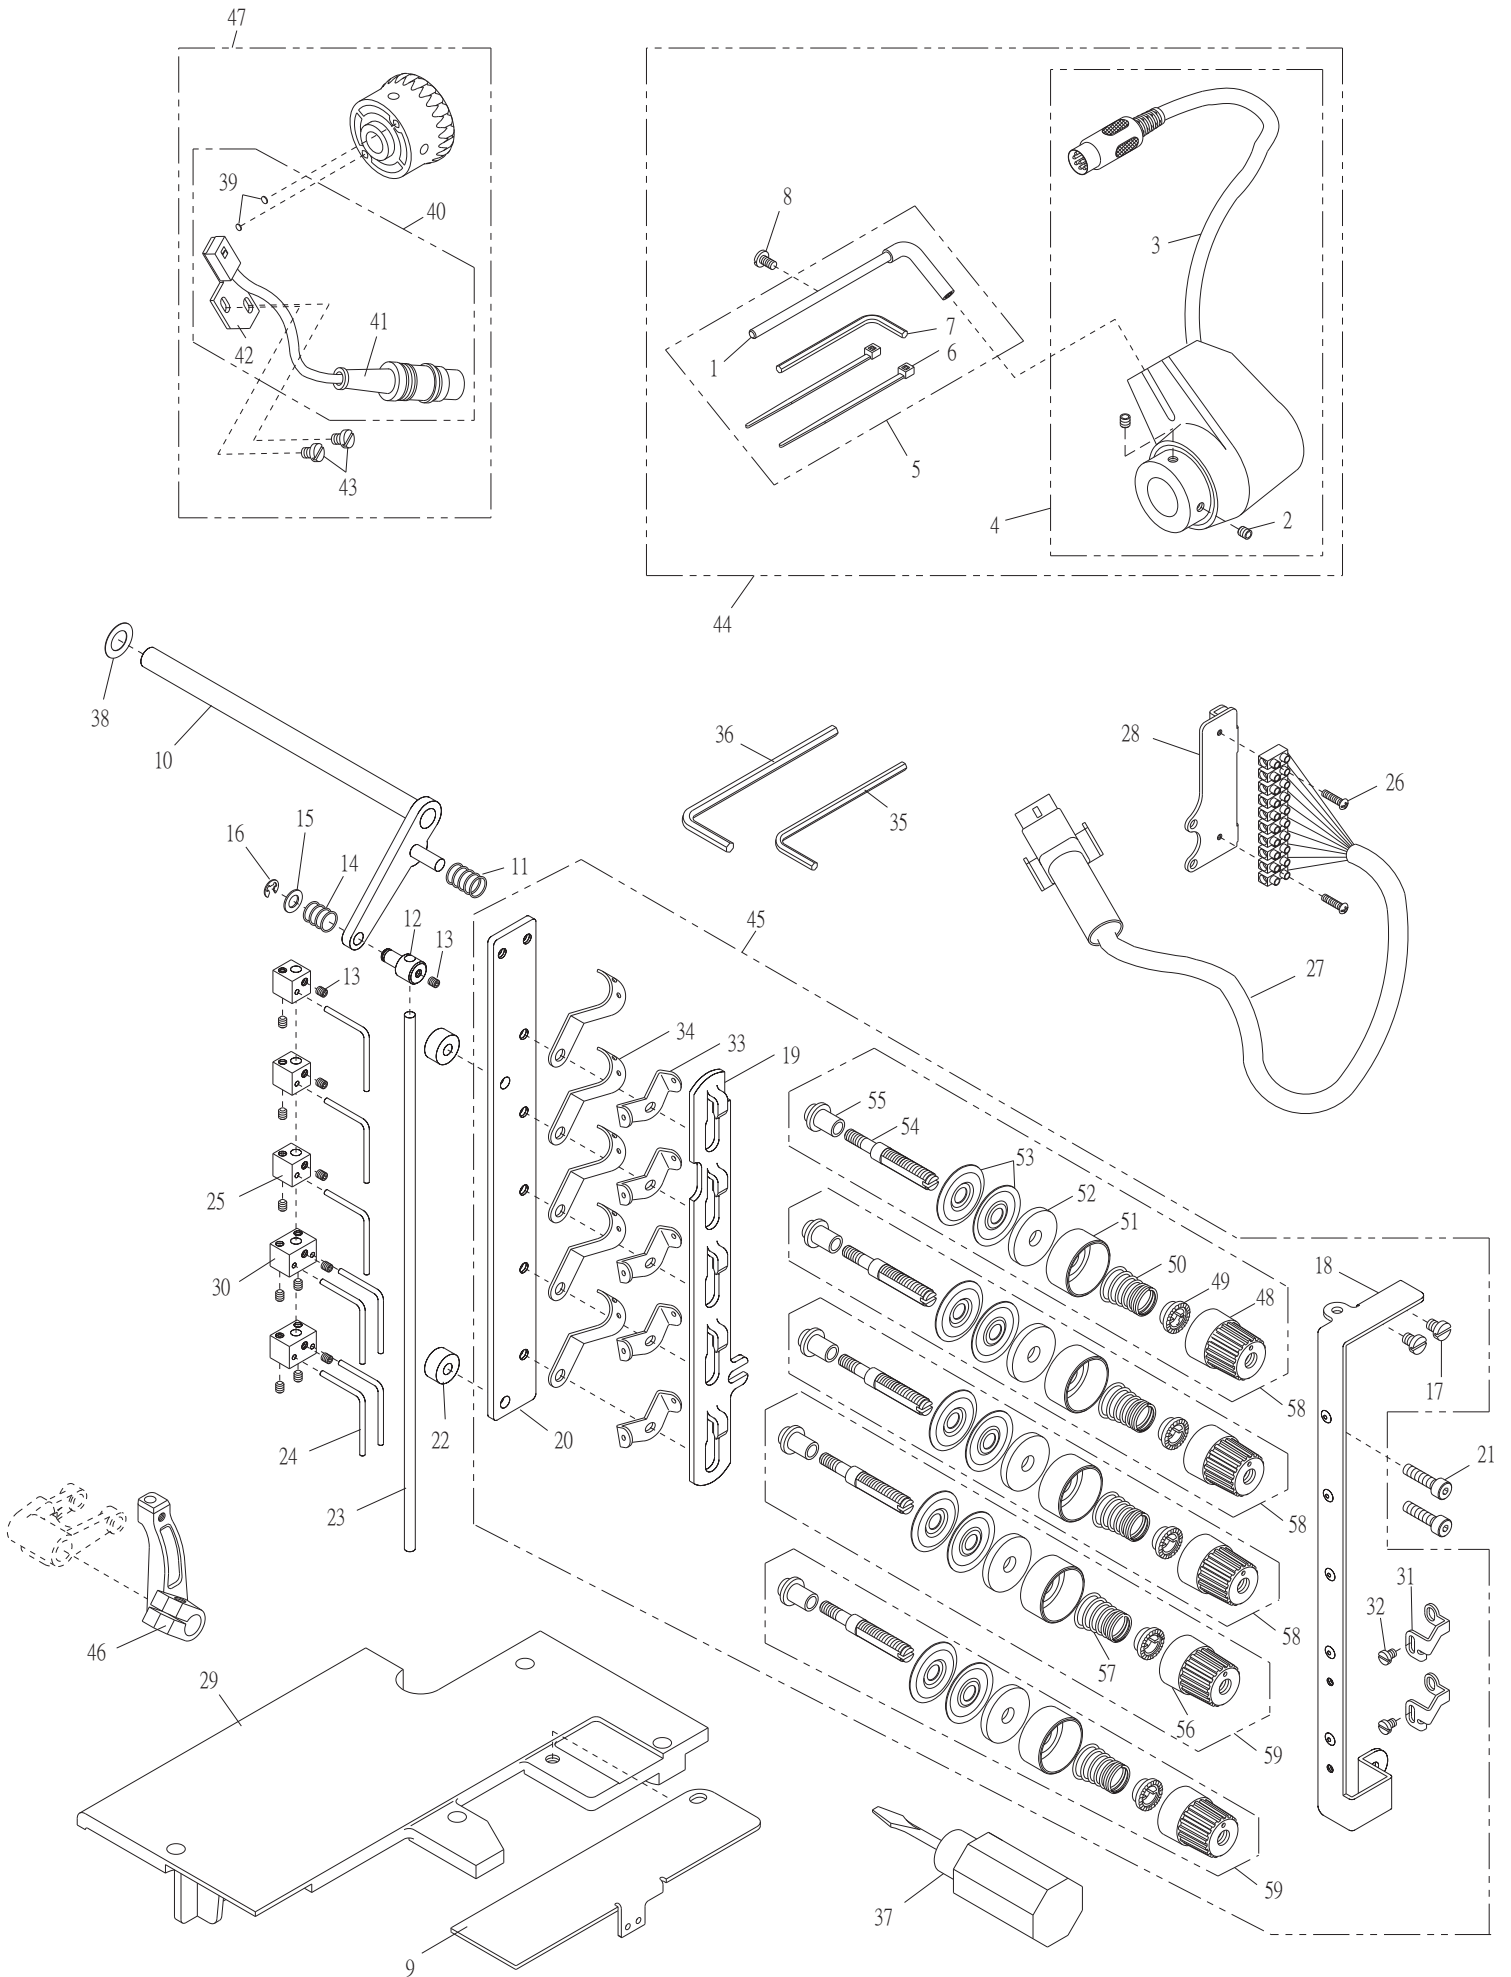

7.UTE02 鬆線機構及更換件UTE02 Thread Tension Components And Motor Components

序號	物料編號	名稱	單位用量
Ref. No.	Parts Number	Description	Amt.Req.
51	2200000305	彈簧座 Spring Seat -----	5
52	2100001127	羊毛氈 Felt -----	5
53	2100001126	張力控制盤 Tension Disc -----	10
54	22000003081	螺樁 Stud -----	5
55	22000003091	隔環 Spacer -----	5
56	2100001121A	張力調整螺帽 Tension Nut (Yellow) (Sh1121)-----	2
57	2100041131	彈簧 Spring (Yellow) (Sh1131)-----	2
58	231A00001922	張力控制組 Tension Asm. (Red) -----	3
59	220A0000315	張力控制組 Tension Asm. (Yellow) -----	2

Ref. No.	13	24	25	30
2 Needle without Spreader	8pcs.	4pcs.	2pcs.	1pcs.
3 Needle without Spreader	10pcs.	5pcs.	3pcs.	1pcs.
2 Needle with Spreader	11pcs.	6pcs	2pcs.	2pcs.
3 Needle with Spreader	13pcs.	7pcs..	3pcs.	2pcs.

*: 選購,並須配合伺服馬達使用 <型號HVP-60,HVP-70,HVP-90>

*: To choose and purchase: These two devices should be used together with AC servo motor <Model No:HVP-60,HVP-70,HVP-90>